



TOOL MODEL: MXTP-05

PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

<b>PRESSURE IN PSI</b>	<b>FT.LBS.</b>	<b>TORQUE IN KGM</b>	<b>NM</b>	<b>PRESSURE IN BAR</b>
1500	812	112	1101	104
1600	867	120	1175	110
1800	977	135	1324	124
2000	1087	150	1474	138
2200	1198	166	1623	152
2400	1308	181	1773	165
2600	1419	196	1923	179
2800	1529	212	2073	193
3000	1640	227	2223	207
3200	1751	242	2373	220
3400	1861	257	2523	234
3600	1972	273	2673	248
3800	2082	288	2823	262
4000	2193	303	2973	276
4200	2304	319	3123	290
4400	2415	334	3273	303
4600	2525	349	3423	317
4800	2636	365	3574	331
5000	2747	380	3724	345
5200	2857	395	3873	358
5400	2967	410	4023	372
5600	3078	426	4172	386
5800	3188	441	4321	400
6000	3298	456	4471	414
6200	3408	471	4619	427
6400	3517	486	4768	441
6600	3627	502	4916	455
6800	3736	517	5065	468
7000	3846	532	5214	482
7200	3953	547	5359	496
7400	4061	562	5505	510
7600	4168	576	5650	524
7800	4276	591	5796	538
8000	4383	606	5942	552
8200	4489	621	6085	565
8400	4594	635	6228	579
8600	4700	650	6371	593

<b>PRESSURE IN PSI</b>	<b>FT.LBS.</b>	<b>TORQUE IN KGM</b>	<b>NM</b>	<b>PRESSURE IN BAR</b>
8800	4805	665	6514	607
9000	4911	679	6657	620
9200	5013	693	6796	634
9400	5115	707	6934	648
9600	5218	722	7073	662
9800	5320	736	7212	676
10000	5422	750	7350	690

\* ISO DOCUMENT 9000

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
  - **KEEP WORK AREA CLEAN AND WELL LIT.**
  - **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
  - **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
  - **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
  - **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used
  - **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
  - **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
  - **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
  - **USE SAFETY GLASSES.**
  - **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
  - **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
  - **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
  - **PRIOR TO OPERATION**
    - Ensure that all hydraulic connections are securely connected and there is no leakage
    - Verify that the Hydraulic hoses are not kinked or otherwise damaged.
    - Ensure the square drive and its retainer are fully and securely engaged.
    - Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
  - **PRIOR TO USE.**
    - Check sockets for size, quality and flaws. (Do not use if questionable)
    - Cycle tool to ensure proper function.
    - Locate a solid, secure reaction point.
    - Be sure the reaction arm retaining clamp is fully engaged.
    - Be sure the hydraulic hoses are free of the reaction point.
    - Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.
- NOTE:** Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.
- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
  - **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)**NOTE:** Hytorc Pumps are designed to operate Hytorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

**SAVE THESE INSTRUCTIONS FOR FUTURE USE!**