



TOOL MODEL: VERSA 20

PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

PRESSURE IN PSI	FT.LBS.	TORQUE IN KGM	NM	PRESSURE IN BAR
1500	3088	427	4187	104
2000	4159	575	5639	138
3000	6305	872	8548	207
4000	8446	1168	11451	276
5000	10616	1468	14393	345
6000	12779	1767	17326	414
7000	14936	2065	20251	482
8000	17105	2365	23191	552
9000	19281	2666	26142	620
10000	21458	2967	29093	690

* ISO DOCUMENT 9000

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTUCTIONS.**
 - **KEEP WORK AREA CLEAN AND WELL LIT.**
 - **CONSIDER WORK AREA ENVIRONMENT.**Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
 - **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
 - **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
 - **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used
 - **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
 - **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
 - **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
 - **USE SAFETY GLASSES.**
 - **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
 - **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
 - **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
 - **PRIOR TO OPERATION**
 - Ensure that all hydraulic connections are securely connected and there is no leakage
 - Verify that the Hydraulic hoses are not kinked or otherwise damaged.
 - Ensure the square drive and its retainer are fully and securely engaged.
 - Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
 - **PRIOR TO USE.**
 - Check sockets for size, quality and flaws. (Do not use if questionable)
 - Cycle tool to ensure proper function.
 - Locate a solid, secure reaction point.
 - Be sure the reaction arm retaining clamp is fully engaged.
 - Be sure the hydraulic hoses are free of the reaction point.
 - Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid andsecure position.
- NOTE:** Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.
- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
 - **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)**NOTE:** Hyltorc Pumps are designed to operate Hyltorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

SAVE THESE INSTRUCTIONS FOR FUTURE USE!